




RECESSED HOUSING REMODELING INSTALLATION INSTRUCTIONS



Step 1
Carefully cut a hole in ceiling as shown below (Fig.1). Item A.

Fig. 1

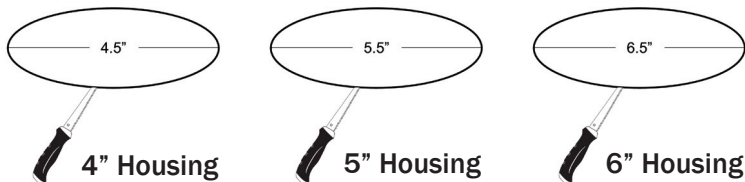

Step 2
Pull supply wires through opening and make electrical connections.
Refer to "electrical connections" section below. Item B.




Step 3
Electrical Connections: Remove cover from junction box. Feed supply wires through one of the knockouts. Connect supply black (or red) to fixture black. Supply white to fixture white. Connect supply ground to green ground screw (Fig.2) carefully place splices in J-box and replace cover.

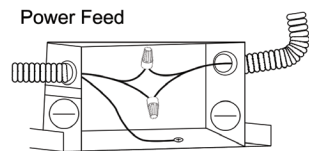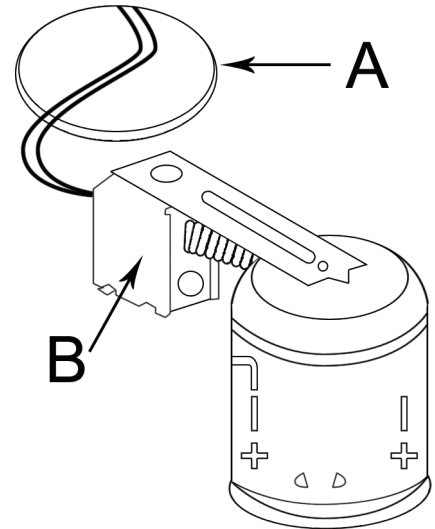

4 Ground Screw or Ground Wire

Fig. 2

Step 4
Insert the housing in ceiling cutout.
With clips seated properly in can (A). Insert remodel housing into ceiling, junction box first. Hold fixture up against ceiling and push clip through housing slot (B). To lock clip in place, push flat portion against side of can (B). To release, pull down on clip (C).

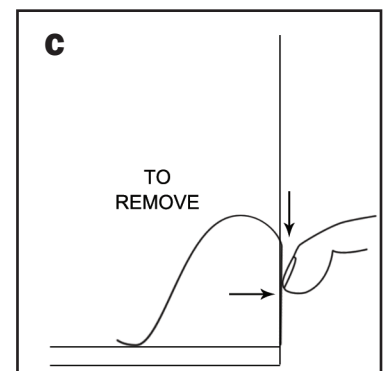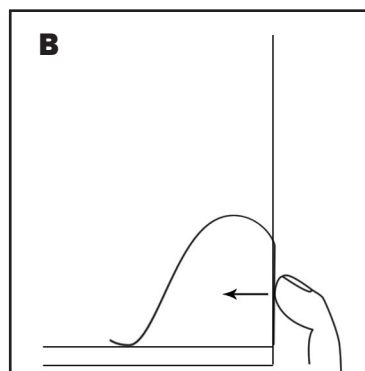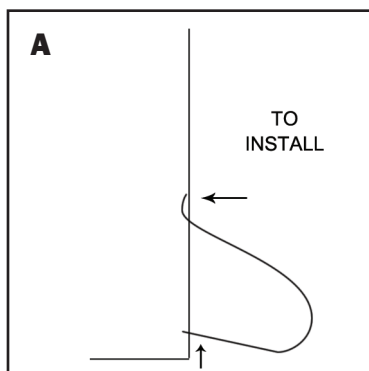

Step 5
Install trim.